

Accept call and speak

Pick up receiver > key 7 > microphone is activated

**Open door**

Pick up receiver > key 1

**Turn on light**

Pick up receiver > key 3

**Video recording in case of suspicion**

 
Pick up receiver > key 9

**Turn doorbell to mute**

Pick up receiver > 3x key * > key 1 > press key 1 repeatedly until profile 0 is activated > key * > doorbell is muted

**Turn doorbell back on:** Activate profile 1**Change volume of receiver**

Line key > key F1 > pick up receiver > arrow keys





Access latest message

Pick up receiver > key * > key 1 > key 2



View video recordings

Pick up receiver > 2x key * > player mode is activated



 
Move camera image

Pick up receiver > key 2 (up), key 8 (down), key 6 (right), key 4 (left); key 0 (default view); alternatively, arrow keys can be used



Zoom camera image

Pick up receiver > key 5 (zoom mode is activated), key 2 (zoom in), key 8 (zoom out), key 0 (default view); alternatively, arrow keys can be used



Status icons

	Door open		Light on
	Door closed		Microphone mute
	Door locked		Recording on
	Door unlocked		Latest message
	Error/Manipulation		Camera error

Main menu



Display of status

Sub menu

Arrow keys

Hands-free mode

Open door with blue user card

Hold up user card > door is unlocked



Open door with PIN code

Enter PIN code > press key button > door is unlocked



PIN code



Open door on power failure (red LED flashes every 4 sec)

Press ESC/ALARM (until sound signal/lighting is on) > opening the door with card and PIN is possible now



keep pressed



Leave a message (for standard mailbox)

Press envelope key > welcome message plays > keep envelope key pressed and leave message



Welcome message



keep pressed

Message

Play back messages*

Hold up user card > keys 0 – 9 blink: 0 – 9 new messages > play back with keys 0 – 9



Messages

Record new welcome message for mailbox*

Press OK/MENU and hold the key > hold up user card > press bell key > press bell key again > keep envelope key pressed and leave message > let go of envelope key > welcome message is activated



keep pressed



keep pressed

Status LEDs ● ●



● on	Normal status
● on	Device error
✶ flashes every 4 sec	Emergency operation

Open door (also on power failure)

Keep door opener key pressed for **3 seconds**



Confirm message display (green LED blinks every 2 sec)

Press door opener key briefly



Switch doorbell on/off

Press doorbell key (left) briefly > doorbell is switched on or off



Change volume

Keep doorbell key (left) pressed for **2 seconds** (until double sound signal)



Lower: Press doorbell key (left) briefly

Higher: Press door opener key (right) briefly

Change ring tone

Keep doorbell key (left) pressed for **2 seconds** (until double sound signal) > press both keys at the same time briefly > press door opener key (right) repeatedly (until desired ring tone is found)



● Status LEDs ●



Doorbell Door opener

● on	Door closed & locked	Door
☀ flashes every 2 sec	Door closed & unlocked	
● on	No contact	Establishing Contact
● blinks every 2 sec	New message	
○ briefly off after 1 sec	Missed the ringing by less than 5 min	
○ briefly off after 2 sec	Missed the ringing by more than 5 min	Error
● on	Device error	
☀ flashes every 4 sec	Emergency operation	
☀ flashes every 3 sec	Battery is empty	